

Description

This reusable tool is used to properly space the encoder disk from the encoder base.



Ordering Information

SPACER -

Type

A2 =

E2 =

E3S =

E3 (

E3L =

E3 (> or = 12mm bore)

E4 =

E4P =

E4T =

E5 =

E6S =E6 (

E6L =

E6 (> or = 12mm bore)

E7P =

E8P =

E8T =

Notes

- US Digital® warrants its products against defects in materials and workmanship for two years. See complete warranty for details.